

# CONTENTS

---

<b>1</b>	<b>GENERAL INFORMATION, SAFETY AND TOOLS</b>	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-17
		TOOLS	1-19
		FASTENERS, MEASUREMENT, AND CONVERSIONS SPECIFICATIONS	1-26 1-27
		<b>2</b>	<b>MAINTENANCE AND TUNE-UP</b>
LUBRICATION SERVICE	2-6		
ENGINE MAINTENANCE	2-15		
BOAT MAINTENANCE	2-37		
TUNE-UP	2-40		
TIMING AND SYNCHRONIZATION	2-51		
VALVE CLEARANCE (4-STROKE)	2-78		
STORAGE	2-81		
CLEARING A SUBMERGED MOTOR	2-83		
SPECIFICATIONS	2-85		
<b>3</b>	<b>FUEL SYSTEM</b>	FUEL SYSTEM BASICS	3-2
		FUEL TANK AND LINES	3-6
		CARBURETED FUEL SYSTEM	3-11
		CARBURETOR	3-14
		ELECTRONIC FUEL INJECTION (EFI)	3-41
		SPECIFICATIONS	3-71
<b>4</b>	<b>IGNITION AND ELECTRICAL</b>	UNDERSTANDING AND TROUBLESHOOTING	
		ELECTRICAL SYSTEMS	4-2
		IGNITION SYSTEMS (BREAKER POINT MAGNETO)	4-8
		IGNITION SYSTEMS (ELECTRONIC)	4-15
		CHARGING CIRCUIT	4-69
		WIRING DIAGRAMS	4-104
		SPECIFICATIONS	4-141
<b>5</b>	<b>LUBRICATION AND COOLING</b>	LUBRICATION SYSTEMS (2-STROKE)	5-2
		LUBRICATION SYSTEM (4-STROKE)	5-14
		COOLING SYSTEM	5-21

# CONTENTS

POWERHEAD  
POWERHEAD BREAK-IN  
SPECIFICATIONS

6-2  
6-87  
6-89

POWERHEAD

6

GEARCASE  
JET DRIVE

7-2  
7-29

LOWER UNIT

7

TRIM & TILT SYSTEMS  
TRIM & TILT WIRING

8-2  
8-22

TRIM AND TILT

8

REMOTE CONTROL  
CONTROL CABLES

9-2  
9-14

REMOTE CONTROL

9

HAND REWIND STARTER  
EMERGENCY STARTING

10-2  
10-22

HAND REWIND STARTER

10

MASTER INDEX

10-23

MASTER INDEX

<b>A</b>	
AC LIGHTING COIL .....	4-66
Removal & Installation .....	4-67
Testing .....	4-66
ACCUMIX OIL INJECTION SYSTEM .....	5-2
Assembly .....	5-3
Cleaning And Inspection .....	5-3
Removal .....	5-2
AIR INTAKE SILENCER AND FLAME ARRESTER .....	3-51
Removal & Installation .....	3-51
ANCHORS .....	1-10
ANODES (ZINCS) .....	2-35
Inspection .....	2-35
Servicing .....	2-35
<b>B</b>	
BATTERY .....	4-67
BAILING DEVICES .....	1-10
<b>BOAT MAINTENANCE</b> .....	<b>2-37</b>
Batteries .....	2-37
Fiberglass Hull .....	2-39
<b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)</b> ..	<b>1-10</b>
Anchors .....	1-10
Bailing Devices .....	1-10
Compass .....	1-10
First Aid Kit .....	1-10
Tools And Spare Parts .....	1-12
VHF-FM Radio .....	1-10
<b>BOATING SAFETY</b> .....	<b>1-4</b>
Courtesy Marine Examinations .....	1-10
Regulations For Your Boat .....	1-4
Required Safety Equipment .....	1-5
<b>BOLTS, NUTS AND OTHER THREADED RETAINERS</b> .....	<b>1-26</b>
<b>BREAKER POINT IGNITION SYSTEMS</b> .....	<b>2-47</b>
General Information .....	2-47
Inspection & Testing .....	2-47
Replacement .....	2-48
<b>BREAKING IN A POWERHEAD</b> .....	<b>6-88</b>
2-Stroke Motors .....	6-88
Carbureted 4-Stroke .....	6-88
EFI 4-Stroke .....	6-89
<b>C</b>	
CAMSHAFT POSITION (CMP) SENSOR .....	3-60
Removal & Installation .....	3-61
Testing .....	3-60
<b>CARBURETED FUEL SYSTEM</b> .....	<b>3-11</b>
Description And Operation .....	3-11
Troubleshooting .....	3-12
Fuel Pump .....	3-34
Manual Fuel Primer .....	3-38
Electric Fuel Primer .....	3-39
<b>CARBURETOR</b>	
2.0-3.5 Hp Motors .....	3-14
5 Hp (109cc) Motors .....	3-16
Colt/Junior, 3-4 Hp & 4 Deluxe Motors .....	3-18
5/6 Hp 4-Stroke Motors .....	3-20
8/9.9 & 9.9/15 Hp 4-Stroke Motors .....	3-22
9.9/10/14/15 Hp (216/255cc) Motors Thru 1993 & All 18 Jet-35 Hp (521cc) Motors .....	3-24
25/35 Hp (500/565cc) Motors .....	3-28
All Except Above, Including 5/6/6.5/8 (164cc), 9.9/10/15 (255cc, 1994 And Later), 25-55 (737cc) & 25-70 (913cc) Motors .....	3-30
Cleaning & Inspection .....	3-33
CHARGE COIL .....	4-24
Removal & Installation .....	4-29
Testing .....	4-24
<b>CHARGING CIRCUIT</b> .....	<b>4-57</b>
AC Lighting Coil .....	4-66
Battery .....	4-67
Charging System Identification .....	4-58
General Information .....	4-57
Rectifier .....	4-62
Regulator/Rectifier .....	4-64
Service Precautions .....	4-57
Stator/Battery Charge Coil .....	4-61
Troubleshooting .....	4-58
CHARGING SYSTEM IDENTIFICATION .....	4-58
CHEMICALS .....	1-17
Cleaners .....	1-18
Lubricants & Penetrants .....	1-17
Sealants .....	1-18
<b>CLEARING A SUBMERGED MOTOR</b> .....	<b>2-83</b>
<b>CLOSED THROTTLE POSITION (CTP) SWITCH</b> .....	<b>3-67</b>
Removal & Installation .....	3-67
Testing .....	3-67
<b>COOLING SYSTEM</b> .....	<b>5-21</b>
Cooling System Schematics .....	5-40
Description & Operation .....	5-22
Flushing .....	2-16
Thermostat .....	5-37
Troubleshooting .....	5-23
Water Pressure Relief Valve .....	5-39
Water Pump .....	5-25
<b>COOLING SYSTEM SCHEMATICS</b> .....	<b>5-40</b>
Colt/Junior Motors .....	5-40
2.0-3.5 hp (78cc) .....	5-41
3-4 hp (87cc) .....	5-41
4 deluxe (87cc) .....	5-42
5 hp (109cc) .....	5-42
5/6 hp (128cc) 4-stroke .....	5-43
5/6/8 hp (164cc) .....	5-43
8/9.9 hp (211cc) 4-stroke .....	5-44
9.9-15 hp (216/255cc) .....	5-44
9.9/15 hp (305cc) 4-stroke .....	5-45
18 jet-35 hp (521cc) .....	5-45
25/35 hp (500/565cc) .....	5-46
45/55 hp (737cc) Commercial .....	5-46
25-55 hp (737cc) .....	5-47
25-70 hp (913cc) .....	5-47
40/50 hp (815cc) EFI .....	5-48
70 hp (1298cc) EFI .....	4-48
COMPASS .....	1-10
<b>COMPRESSION TESTS</b> .....	<b>2-41</b>
Leakage Check .....	2-42
Tune-Up Check .....	2-41
<b>CONTROL CABLES</b> .....	<b>9-14</b>
Rigging .....	9-14
COURTESY MARINE EXAMINATIONS .....	1-10
CRANKSHAFT POSITION (CKP) SENSOR .....	3-61
Removal & Installation .....	3-62
Testing .....	3-62
<b>D</b>	
DE-CARBONING THE PISTONS .....	2-41
DUAL HANDLE SURFACE MOUNT REMOTE FOR SINGLE MOTORS .....	9-7
Overhaul .....	9-7
<b>E</b>	
EFI SYSTEM RELAY .....	3-67
Testing & Service .....	3-67
ELECTRIC FUEL PRIMER .....	3-39
Function Test .....	3-39
Removal And Installation .....	3-40
Solenoid Check .....	3-40
ELECTRONIC (CDI/EFI) IGNITION .....	2-51
Inspection .....	2-51
<b>ELECTRONIC FUEL INJECTION (EFI)</b> .....	<b>3-41</b>
Air Intake Silencer And Flame Arrester .....	3-51
Camshaft Position (CMP) Sensor .....	3-60
Closed Throttle Position (CTP) Switch .....	3-67
Crankshaft Position (CKP) Sensor .....	3-61
Description & Operation .....	3-41
EFI System Relay .....	3-67
Engine Control Unit (ECU) .....	3-62
Engine Symptom Diagnostic Charts .....	3-47
Fuel Rail And Injectors .....	3-58
Idle Air Control (IAC) Valve .....	3-68
Intake Manifold .....	3-52

# 10-24 MASTER INDEX

Low Pressure Fuel Pump	3-53
Manifold Absolute Pressure (MAP) Sensor	3-66
Neutral (Safety) Switch	3-69
Self Diagnostic System	3-43
Sensor And Circuit Resistance/Output Tests	3-45
Temperature Sensors	3-63
Throttle Body	3-51
Troubleshooting	3-41
Vapor Separator Tank & Fuel Pump	3-55
<b>ELECTRONIC TOOLS</b>	<b>1-23</b>
Battery Chargers	1-24
Battery Testers	1-23
Gauges	1-24
Multi-Meters (DVOMS)	1-24
<b>EMERGENCY STARTING</b>	<b>10-22</b>
General Information	10-22
<b>ENGINE CONTROL UNIT (ECU)</b>	<b>3-62</b>
Removal & Installation	3-63
<b>ENGINE COVERS</b>	<b>2-15</b>
Removal & Installation	2-15
<b>ENGINE IDENTIFICATION</b>	<b>2-2</b>
Engine Serial Numbers	2-3
<b>ENGINE MAINTENANCE</b>	<b>2-15</b>
Anodes (Zincs)	2-35
Cooling System	2-16
Engine Covers	2-15
Engine Oil (2-Stroke)	2-18
Engine Oil/Filter (4-Stroke)	2-20
Fuel Filter	2-25
Gearcase (Lower Unit) Oil	2-23
Jet Drive Impeller	2-32
Propeller	2-29
RescuePro Rotor	2-33
Timing Belt	2-36
<b>ENGINE OIL (2-STROKE)</b>	<b>2-18</b>
Filling	2-19
Recommendations	2-18
<b>ENGINE OIL/FILTER (4-STROKE)</b>	<b>2-20</b>
Checking Oil Level	2-20
Oil/Filter Change	2-21
Recommendations	2-20
<b>ENGINE SYMPTOM DIAGNOSTIC CHARTS</b>	<b>3-47</b>
Engine Cranks But Won't Run	3-47
Engine Idles Improperly	3-48
Engine Overheats	3-50
Engine Runs Rough/Lacks Power	3-49
Engine Won't Crank	3-47
<b>ENGINE TEMPERATURE SENSORS (EFI)</b>	<b>4-101</b>
<b>ENGINE TEMPERATURE SWITCHES (CARB)</b>	<b>4-101</b>
Removal & Installation	4-102
Testing	4-101
<b>F</b>	
<b>FASTENERS, MEASUREMENTS AND CONVERSIONS</b>	<b>1-26</b>
Bolts, Nuts And Other Threaded Retainers	1-26
Standard And Metric Measurements	1-27
Torque	1-27
<b>FLYWHEEL</b>	<b>6-2</b>
Removal & Installation	6-2
<b>FLYWHEEL &amp; BREAKER POINT</b>	<b>4-11</b>
Installation	4-15
Removal	4-11
<b>FUEL</b>	<b>3-2</b>
Alcohol-Blended Fuels	3-3
Checking	3-3
High Altitude Operation	3-3
Octane Rating	3-3
Recommendations	3-3
Vapor Pressure	3-3
<b>FUEL FILTER</b>	<b>2-25</b>
Carbureted Motors	2-26
EFI Motors	2-28
<b>FUEL LINES AND FITTINGS</b>	<b>3-8</b>
Service	3-9
Testing	3-8

<b>FUEL PRIMER</b>	
Manual	3-38
Electric	3-39
<b>FUEL PUMP - CARB</b>	<b>3-34</b>
Overhaul	3-37
Removal & Installation	3-26
Testing	3-34
<b>FUEL RAIL AND INJECTORS</b>	<b>3-58</b>
Injector Operational Test	3-59
Injector Resistance Test	3-59
Injector Signal Test	3-59
Removal & Installation	3-59
<b>FUEL SYSTEM BASICS</b>	<b>3-2</b>
Fuel	3-2
Fuel System Pressurization	3-4
Fuel System Service Cautions	3-2
<b>FUEL SYSTEM PRESSURIZATION</b>	<b>3-4</b>
Pressurizing (Checking For Leaks)	3-5
Relieving Pressure (EFI Only)	3-5
<b>FUEL SYSTEM SERVICE CAUTIONS</b>	<b>3-2</b>
<b>FUEL TANK</b>	<b>3-6</b>
Service	3-6
<b>FUEL TANK AND LINES</b>	<b>3-6</b>
Fuel Lines And Fittings	3-8
Fuel Tank	3-6

## G

<b>GEARCASE (LOWER UNIT) OIL</b>	<b>2-23</b>
Checking	2-24
Draining & Filling	2-25
Recommendations	2-24
<b>GEARCASE</b>	<b>7-2</b>
Checking	2-24
Description And Operation	7-2
Draining & Filling	2-25
Gearcase Assembly	7-2
Propeller Shaft Seal	7-18
Recommendations	2-24
<b>GEARCASE REMOVAL &amp; INSTALLATION</b>	<b>7-2</b>
Colt/Junior (43cc)	7-2
2.0-3.5 Hp (78cc)	7-3
5 Hp (109cc)	7-4
3/4 Hp (87cc)	7-4
4 Deluxe (87cc)	7-7
5/6 Hp (128cc)	7-7
5/6/8 Hp (164cc)	7-7
8/9.9 Hp (211cc)	7-8
9.9-15 Hp (216/255cc)	7-8
9.9/15 Hp (305cc)	7-8
10/14 (216/255cc)	7-10
20-35 Hp (521cc)	7-10
25/35 Hp (500/565cc)	7-10
25-55 Hp (737cc)	7-13
25-70 Hp (913cc) (Exc. Jet)	7-13
40/50 Hp (815cc) EFI	7-15
70 Hp (1298cc) EFI	7-17

## H

<b>HAND REWIND STARTERS</b>	<b>10-2</b>
Introduction	10-2
General Information	10-2
2.0-3.5 Hp (78cc) Motors	10-2
5 Hp (109cc) Motors	10-5
9.9-15 Hp (216cc) Motors	10-6
Colt/Junior And 3-35 Hp (Under 600cc) Motors (Exc. 5 Hp/109cc,	
4 Deluxe, 9.9-15 Hp/216cc And 18 Jet-35 Hp/521cc Models)	10-9
4 Deluxe (87cc) Motors	10-13
18 Jet-35 Hp (521cc) Motors	10-16
25-55 Hp (737cc) And 25-70 Hp (913cc) Motors	10-19
EFI Motors	10-21
<b>HAND TOOLS</b>	<b>1-19</b>
Hammers	1-22
Pliers	1-21
Screwdrivers	1-22
Socket Sets	1-19

Wrenches . . . . .	1-21	Accumix Oil Injection System . . . . .	5-2
<b>HOW TO USE THIS MANUAL</b> . . . . .	<b>1-2</b>	Integral Oil Mixing Unit System (25/35 Hp 3-Cyl) . . . . .	5-11
Avoiding The Most Common Mistakes . . . . .	1-3	Oil Tank And Mixing Unit . . . . .	5-12
Avoiding Trouble . . . . .	1-2	Pulse Limiter . . . . .	5-7
Can You Do It? . . . . .	1-2	Sending Unit . . . . .	5-12
Directions And Locations . . . . .	1-2	System Verification & Troubleshooting . . . . .	5-3
Maintenance Or Repair? . . . . .	1-2	Troubleshooting . . . . .	5-11
Professional Help . . . . .	1-3	Variable Ratio Oil (VRO2) Oil Injection System . . . . .	5-3
Purchasing Parts . . . . .	1-3	VRO2 Pickup And Oil Supply Hose . . . . .	5-7
Where To Begin . . . . .	1-2	VRO2 Pump . . . . .	5-8
<b>I</b>		<b>LUBRICATION SYSTEM (4-STROKE)</b> . . . . .	<b>5-14</b>
IDLE AIR CONTROL (IAC) VALVE . . . . .	3-68	Description And Operation . . . . .	5-14
Removal & Installation . . . . .	3-68	Oil Pressure . . . . .	5-14
Testing . . . . .	3-68	Oil Pressure Switch And Warning System . . . . .	5-21
IGNITION COIL & ARMATURE - BREAKER POINT . . . . .	4-11	Oil Pump . . . . .	5-17
Installation . . . . .	4-14	<b>M</b>	
Removal . . . . .	4-11	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR . . . . .	3-66
IGNITION COILS - ELECTRONIC . . . . .	4-51	Removal & Installation . . . . .	3-66
Description & Operation . . . . .	4-51	Testing . . . . .	3-66
Removal & Installation . . . . .	4-54	MANUAL FUEL PRIMER . . . . .	3-38
Testing . . . . .	4-52	Assembly/Installation . . . . .	3-39
<b>IGNITION SYSTEMS (BREAKER POINT MAGNETO)</b> . . . . .	<b>4-8</b>	Cleaning and Inspection . . . . .	3-39
Cleaning & Inspection . . . . .	4-13	Function Test . . . . .	3-38
Flywheel & Breaker Point . . . . .	4-11	Primer Check . . . . .	3-38
General Information . . . . .	4-8	Removal/Disassembly . . . . .	3-38
Ignition Coil & Armature . . . . .	4-11	<b>MEASURING TOOLS</b> . . . . .	1-25
Ignition Service . . . . .	4-10	Depth Gauges . . . . .	1-26
Top Seal . . . . .	4-13	Dial Indicators . . . . .	1-25
Troubleshooting . . . . .	4-8	Micrometers & Calipers . . . . .	1-25
<b>IGNITION SYSTEMS (ELECTRONIC)</b> . . . . .	<b>4-15</b>	Telescoping Gauges . . . . .	1-26
Charge Coil . . . . .	4-24	<b>N</b>	
Description And Operation . . . . .	4-15	NEUTRAL (SAFETY) SWITCH . . . . .	3-69
Ignition Coils . . . . .	4-51	Removal & Installation . . . . .	3-70
Power Coil . . . . .	4-39	Testing . . . . .	3-69
Power Pack (Ignition Module) - Carb Only . . . . .	4-45	<b>O</b>	
Sensor/Trigger Coil . . . . .	4-41	OIL LEVEL SWITCH (OIL INJECTED 2-STROKES) . . . . .	4-103
Troubleshooting . . . . .	4-16	OIL PRESSURE SWITCH (4-STROKE ONLY) . . . . .	4-102
INTAKE MANIFOLD . . . . .	3-52	Removal & Installation . . . . .	4-103
Removal & Installation . . . . .	3-52	Testing . . . . .	4-103
INTEGRAL OIL MIXING UNIT SYSTEM (25/35 HP 3-CYL) . . . . .	5-11	OIL PUMP - 4-STROKE . . . . .	5-17
Overhaul . . . . .	5-13	Removal, Overhaul & Installation . . . . .	5-17
Removal/Installation . . . . .	5-12	<b>P</b>	
<b>J</b>		POWER COIL . . . . .	4-39
<b>JET DRIVE</b> . . . . .	<b>7-29</b>	Removal & Installation . . . . .	4-41
Description & Operation . . . . .	7-29	Testing . . . . .	4-39
Impeller . . . . .	7-29	<b>POWERHEAD</b> . . . . .	<b>6-2</b>
Jet Drive Assembly . . . . .	7-31	Flywheel . . . . .	6-2
Reverse Gate . . . . .	7-32	Powerhead . . . . .	6-4
<b>JET DRIVE ASSEMBLY</b> . . . . .	7-31	Timing Belt/Chain . . . . .	6-84
Removal & Installation . . . . .	7-31	<b>POWERHEAD</b> . . . . .	6-4
<b>JET DRIVE BEARING</b> . . . . .	2-7	Service . . . . .	6-4
Recommended Lubricant . . . . .	2-7	Cleaning & Inspection . . . . .	6-72
Daily Bearing Lubrication . . . . .	2-7	<b>POWERHEAD BREAK-IN</b> . . . . .	<b>6-87</b>
Grease Replacement . . . . .	2-7	Breaking In A Powerhead . . . . .	6-88
<b>JET DRIVE IMPELLER</b> . . . . .	2-32	<b>POWERHEAD SERVICE</b> . . . . .	6-4
Checking . . . . .	2-32	Colt/Junior . . . . .	6-5
Inspection . . . . .	2-32	2.0-3.5 Hp (78cc) . . . . .	6-7
<b>L</b>		5 Hp (109cc) . . . . .	6-9
<b>LOW PRESSURE FUEL PUMP - EFI</b> . . . . .	3-53	5/6 Hp (128cc) 4-Stroke . . . . .	6-11
Overhaul . . . . .	3-55	3/4 Hp & 4 Deluxe (87cc) . . . . .	6-16
Pump Pressure Test . . . . .	3-54	5/6/8 Hp (164cc) . . . . .	6-16
Removal & Installation . . . . .	3-54	8/9.9 Hp (211cc) 4-Stroke . . . . .	6-23
<b>LUBRICATION SERVICE</b> . . . . .	<b>2-6</b>	9.9/10/14/15 Hp (216cc) . . . . .	6-28
Electric Starter Motor Pinion . . . . .	2-6	9.9/10/15 Hp (255cc) . . . . .	6-28
Engine Cover Latches . . . . .	2-7	9.9/15 Hp (305cc) 4-Stroke . . . . .	6-33
Engine Mount Clamp Screws . . . . .	2-7	18 Jet-35 Hp (521cc) . . . . .	6-38
Jet Drive Bearing . . . . .	2-7	25/35 Hp (500/565cc) . . . . .	6-43
Power Trim/Tilt Reservoir . . . . .	2-8	25-55 Hp (737cc) . . . . .	6-49
Linkage, Cables And Shafts . . . . .	2-8	25-70 Hp (913cc) . . . . .	6-49
Steering . . . . .	2-13	40/50 Hp (815cc) Efi . . . . .	6-58
Swivel Bracket . . . . .	2-14	70 Hp (1298cc) Efi . . . . .	6-65
Tilt Assembly . . . . .	2-14	Cleaning & Inspection . . . . .	6-72
<b>LUBRICATION SYSTEMS (2-STROKE)</b> . . . . .	<b>5-2</b>		

# 10-26 MASTER INDEX

POWER PACK (IGNITION MODULE) - CARB ONLY	4-45	SAFETY TOOLS	1-17
Removal & Installation	4-51	Eye And Ear Protection	1-17
Testing	4-46	Work Clothes	1-17
POWER TRIM/TILT RESERVOIR	2-8	Work Gloves	1-17
Fluid Level/Condition	2-8	SELF DIAGNOSTIC SYSTEM	3-43
Recommended Lubricant	2-8	Reading & Clearing Codes	3-43
PRE-WIRED BINNACLE MOUNT REMOTE	9-11	SENSOR AND CIRCUIT RESISTANCE/OUTPUT TESTS	3-45
Overhaul	9-11	Testing EFI Components	3-45
PROPELLER SHAFT SEAL REPLACEMENT	7-18	SENSOR/TRIGGER COIL	4-41
Colt/Junior (43cc)	7-18	Removal & Installation	4-45
2.0-3.5 Hp (78cc)	7-18	Testing	4-41
5 Hp (109cc)	7-18	<b>SHOP EQUIPMENT</b>	<b>1-17</b>
3/4 Hp (87cc)	7-19	Chemicals	1-17
4 Deluxe (87cc)	7-20	Safety Tools	1-17
5/6 Hp (128cc)	7-20	SMALL MOTOR STANDARD SURFACE REMOTE	9-6
5/6/8 Hp (164cc)	7-20	Overhaul	9-6
8/9.9 Hp (211cc)	7-21	SPARK PLUGS	2-43
9.9-15 Hp (216/255cc)	7-21	Heat Range	2-43
9.9/15 Hp (305cc)	7-21	Inspection & Gapping	2-46
10/14 Hp (211cc/255cc)	7-23	Reading	2-45
20-35 Hp (521cc)	7-23	Removal & Installation	2-44
25/35 Hp (500/565cc)	7-23	SPARK PLUG WIRES	2-47
25-55 Hp (737cc)	7-25	Removal & Installation	2-47
25-70 Hp (913cc)	7-25	Testing	2-47
40/50 Hp (815cc) EFI	7-26	<b>SPECIFICATIONS</b>	
70 Hp (1298cc) EFI	7-27	Capacities - Two-Stroke Engines	2-90
PROPELLER	2-29	Capacities - Four-Stroke Engines	2-91
Inspection	2-29	Carburetor Set-Up	3-71
Removal & Installation	2-30	Conversion Factors	1-28
PULSE LIMITER	5-7	Engine - Colt/Junior (43cc) 1 Cyl	6-89
<b>R</b>		Engine - 2.0-3.5 Hp (78cc) 1 Cyl	6-90
RECTIFIER	4-62	Engine - 5.0 (109cc) 1 Cyl	6-90
Removal & Installation	4-63	Engine - 5/6 Hp (128cc) 1 Cyl	6-91
Testing	4-63	Engine - 3/4/4 Deluxe Hp (87cc) 2 Cyl	6-91
REGULATIONS FOR YOUR BOAT	1-4	Engine - 8/9.9 Hp (211cc) 2 Cyl	6-92
Capacity Information	1-4	Engine - 5.0-8.0 Hp (164cc) 2 Cyl	6-92
Certificate Of Compliance	1-4	Engine - 9.9/10/14/15 Hp (216cc) 2 Cyl	6-93
Documenting Of Vessels	1-4	Engine - 9.9/10/15 Hp (255cc) 2 Cyl	6-93
Hull Identification Number	1-4	Engine - 9.9/15hp (305cc) 2 Cyl	6-94
Length Of Boats	1-4	Engine - 18-35 Hp (521cc) 2 Cyl	6-94
Numbering Of Vessels	1-4	Engine - 25-55 Hp (737cc) 2 Cyl	6-95
Registration Of Boats	1-4	Engine - 25/35 Hp (500/565cc) 3 Cyl	6-95
Sales And Transfers	1-4	Engine - 25-70 Hp (913cc) 3 Cyl	6-96
Ventilation	1-5	Engine - 40/50 Hp (815cc) 3 Cyl	6-96
Ventilation Systems	1-5	Engine - 40/50 Hp (815cc) 3 Cyl	6-97
REGULATOR/RECTIFIER	4-64	Engine - 70 (1298cc) 4 Cyl	6-98
Removal & Installation	4-66	General Engine	2-85
Testing	4-64	General Engine System	2-87
<b>REMOTE CONTROLS</b>	<b>9-2</b>	Ignition Testing Specifications - Carb Motors	4-141
Concealed Side Mount Remote	9-9	Lubrication Services	2-89
Description & Operation	9-2	Magneto Breaker Point Gap	2-84
Dual Handle Surface Mount Remote For Single Motors	9-7	Maintenance Intervals	2-89
Introduction	9-2	Torque Values	1-27
Pre-Wired Binnacle Mount Remote	9-11	Tune-Up Specifications	2-91
Small Motor Standard Surface Remote	9-6	Two-Stroke Motor Fuel:Oil Ratio	2-90
Standard Surface Mount Remote	9-3	Valve Clearance	2-94
REQUIRED SAFETY EQUIPMENT	1-5	STANDARD AND METRIC MEASUREMENTS	1-27
Fire Extinguishers	1-6	STANDARD SURFACE MOUNT REMOTE	9-3
Personal Flotation Devices	1-7	Overhaul	9-3
Sound Producing Devices	1-8	STARTER MOTOR	4-86
Visual Distress Signals	1-8	Cleaning And Inspection	4-95
Types Of Fires	1-5	Disassembly/Assembly	4-89
Visual Distress Signals	1-8	Removal & Installation	4-87
Warning System	1-7	Testing	4-87
RESCUEPRO ROTOR	2-33	STARTER MOTOR SOLENOID/RELAY SWITCH	4-97
RE-COMMISSIONING	2-83	Removal & Installation	4-98
REVERSE GATE	7-32	Testing The Solenoid	4-97
Gate Adjustment	7-32	<b>STARTING CIRCUIT</b>	<b>4-69</b>
Remote Cable Adjustment	7-32	Description And Operation	4-69
<b>S</b>		Starter Motor	4-86
SAFETY IN SERVICE	1-12	Starter Motor Solenoid/Relay Switch	4-97
Do's	1-12	Troubleshooting	4-69
Don'ts	1-13	STATOR/BATTERY CHARGE COIL	4-61
		Removal & Installation	4-62
		Testing	4-61

<b>STORAGE</b> .....	<b>2-81</b>	<b>TROUBLESHOOTING</b> .....	<b>1-13</b>
Re-Commissioning .....	2-83	Basic Operating Principles .....	1-13
Winterization .....	2-81	Breaker Point Ignition .....	4-8
<b>T</b>		Carburetor .....	3-12
<b>TEMPERATURE SENSORS</b> .....	3-63	Charging system .....	4-58
Removal & Installation .....	3-65	Cooling System .....	5-24
Testing .....	3-64	EFI .....	3-41
<b>THERMOSTAT</b> .....	5-37	Electrical systems .....	4-6
Removal & Installation .....	5-37	Electronic Ignition .....	4-16
<b>THROTTLE BODY</b> .....	3-51	Lubrication System - 2-stroke .....	5-11
Removal & Installation .....	2-51	Starting circuit .....	4-69
<b>TILT LIMIT SWITCH (FASTRAK ONLY)</b> .....	8-12	Thermostat .....	5-25
Adjustment .....	8-12	Trim/Tilt .....	8-7
<b>TIMING AND SYNCHRONIZATION</b> .....	<b>2-51</b>	VRO2 .....	5-3
HOMEMADE SYNCHRONIZATION TOOL .....	2-52	Warning system .....	4-99
2.0-3.5 HP MODELS .....	2-53	<b>TUNE-UP</b> .....	<b>2-40</b>
5 HP (109cc) MODELS .....	2-53	Breaker Points Ignition Systems .....	2-47
COLT/JUNIOR, 3/4 HP & 4 DELUXE MODELS .....	2-53	Compression Tests .....	2-41
5-8 HP (164cc) .....	2-57	De-Carboning The Pistons .....	2-41
STROKE MODELS .....	2-54	Electronic (CDI/UFI) Ignition .....	2-51
5/6 HP (128cc) & 8/9.9 HP (211cc) 4-STROKE MODELS .....	2-56	Introduction .....	2-40
9.9/10/14/15 HP (216cc) & 9.9/10/15 HP (255cc) 2-STROKE .....	2-57	Spark Plugs .....	2-43
MODELS .....	2-57	Spark Plug Wires .....	2-47
9.9/15 HP (305cc) 4-STROKE MODELS .....	2-59	Tune-Up Sequence .....	2-40
20 HP (521cc) MODELS .....	2-61	<b>TUNE-UP SEQUENCE</b> .....	2-40
18 JET & 25-35 HP (521cc) MODELS .....	2-63		
25-55 HP (737cc) .....	2-61	<b>U</b>	
MODELS .....	2-65	<b>UNDERSTANDING AND TROUBLESHOOTING</b>	
25/35 HP (500/565cc) 3-CYL .....	2-69	<b>ELECTRICAL SYSTEMS</b> .....	<b>4-2</b>
25-70 HP (913cc) 3-CYL .....	2-72	Basic Electrical Theory .....	4-2
40/50 HP 4-STROKE MODELS .....	2-76	Electrical Components .....	4-2
70 HP 4-STROKE MODELS .....	2-77	Electrical Testing .....	4-6
<b>TIMING BELT/CHAIN</b>		Precautions .....	4-7
Inspection .....	2-36	Test Equipment .....	4-4
Removal & Installation .....	6-84	Troubleshooting .....	4-6
<b>TOOLS</b> .....	<b>1-19</b>	Wire And Connector Repair .....	4-7
Electronic Tools .....	1-23	<b>V</b>	
Hand Tools .....	1-19	<b>VALVE CLEARANCE (4-STROKE)</b> .....	<b>2-78</b>
Measuring Tools .....	1-25	Valve Lash Adjustment .....	2-78
Other Common Tools .....	1-22	<b>VAPOR SEPARATOR TANK &amp; FUEL PUMP</b> .....	3-55
Special Tools .....	1-23	Removal & Installation .....	3-57
<b>TOP SEAL</b> .....	4-13	Testing .....	3-56
Replacement .....	4-13	<b>VARIABLE RATIO OIL (VRO2) OIL INJECTION SYSTEM</b> .....	5-3
<b>TRIM SENDING UNIT ADJUSTMENT</b> .....	8-12	<b>VRO2 PICKUP AND OIL SUPPLY HOSE</b> .....	5-7
FasTrak Systems .....	8-13	<b>VRO2 PUMP</b> .....	5-8
Large-Motor Conventional Systems .....	8-13	Overhaul .....	5-8
Small-Motor Conventional Systems .....	8-14	Removal and Installation .....	5-8
<b>TRIM/TILT ASSEMBLY - FASTRAK SYSTEMS</b> .....	8-14		
Assembly .....	8-17	<b>W</b>	
Cleaning and Inspection .....	8-17	<b>WARNING HORN OR BUZZER</b> .....	4-103
Disassembly .....	8-16	Testing .....	4-103
Overhaul .....	8-16	<b>WARNING SYSTEM</b> .....	<b>4-98</b>
Removal & Installation .....	8-14	Description And Operation .....	4-98
<b>TRIM/TILT ASSEMBLY - LARGE-MOTOR CONVENTIONAL SYSTEMS</b> .....	8-17	Engine Temperature Sensors (EFI) .....	4-101
Assembly .....	8-19	Engine Temperature Switches (Carb) .....	4-101
Disassembly .....	8-19	Oil Level Switch (Oil Injected 2-Stroke) .....	4-103
Removal & Installation .....	8-17	Oil Pressure Switch (4-Stroke Only) .....	4-102
<b>TRIM/TILT ASSEMBLY - SMALL-MOTOR CONVENTIONAL SYSTEMS</b> .....	8-20	Troubleshooting .....	4-99
Removal & Installation .....	8-20	Warning Horn Or Buzzer .....	4-103
<b>TRIM/TILT SYSTEMS</b> .....	<b>8-2</b>	<b>WATER PRESSURE RELIEF VALVE</b> .....	5-39
Description And Operation .....	8-3	Removal & Installation .....	5-39
Introduction .....	8-2	Water Pump .....	5-25
System Identification .....	8-2	Removal & Installation .....	5-25
Troubleshooting .....	8-7	Inspection & Overhaul .....	5-36
Tilt Limit Switch (Fastrak Only) .....	8-12	<b>WINTERIZATION</b> .....	2-81
Trim Sending Unit Adjustment .....	8-12	<b>WIRING DIAGRAMS</b> .....	<b>4-104</b>
Trim/Tilt Assembly - Fastrak Systems .....	8-14	INDEX .....	4-104
Trim/Tilt Assembly - Large-Motor Conventional Systems .....	8-17	1990-95 Breaker Point Models .....	4-105
Trim/Tilt Assembly - Small-Motor Conventional Systems .....	8-20	1996-01 Rope Start/CDI 2.0-3.5 Hp (78cc) 1-Cyl .....	4-105
<b>TRIM/TILT WIRING</b> .....	<b>8-22</b>	1999-01 Rope Start 5 Hp (109cc) 1-Cyl/2-Stroke .....	4-106
Conventional Systems .....	8-22	1997-01 Rope Start 5/6 hp (128cc) 1-Cyl/4-Stroke .....	4-106
Fastrak Systems .....	8-22	1990 4 Hp (87cc) Excel 4/Ultra 4 2-Cyl .....	4-107
		1990-01 Rope Start 3/4 Hp (87cc) 2-Cyl .....	4-107
		1990-01 Rope Start 6/8 Hp (164cc) Sail 2-Cyl .....	4-108

# 10-28 MASTER INDEX

1990-93 Rope Start 4Deluxe (87cc), 5/6/8 Hp (164cc) & 9.9-15 Hp (216/255cc) 2-Cyl/2-Stroke w/UFI & AC power	4-109
1991-01 Rope Start 4Deluxe (87cc), 5/6/6.5/8 Hp (164cc) and 9.9-15 Hp (255cc) 2-Cyl/2-Stroke w/CDI	4-109
1996-01 Rope Start 8/9.9 Hp (211cc) 2-Cyl/4-Stroke	4-110
1997-98 Tiller Electric 9.9 Hp (211cc) 2-Cyl/4-Stroke	4-110
1997-98 Remote Electric 9.9 Hp (211cc) 2-Cyl/4-Stroke	4-111
1990-92 Tiller Electric 9.9-15 Hp (211cc) and Electric Sail 2-Cyl/2-Stroke w/UFI	4-111
1990-92 Tiller Electric 9.9-15 Hp (211cc) 2-Cyl/2-Stroke w/UFI	4-112
1993-01 Tiller Electric 9.9-15 Hp (255cc) and Electric Sail 2-Cyl/2-Stroke	4-112
1993-01 Remote Electric 9.9-15 Hp (255cc) 2-Cyl/2-Stroke	4-113
1995-01 Rope Start 9.9/15 Hp (305cc) 2-Cyl/4-Stroke	4-114
1995-01 Tiller Electric 9.9 Hp (305cc) High Thrust 2-Cyl/4-Stroke	4-114
1995 Remote Electric 9.9 Hp (305cc) High Thrust 2-Cyl/4-Stroke	4-115
1996-01 Remote Electric 9.9 Hp (305cc) High Thrust 2-Cyl/4-Stroke	4-115
1995-01 Remote Electric 15 Hp (305cc) 2-Cyl/4-Stroke	4-116
1990-92 Rope Start 20-30 Hp (521cc) 2-Cyl w/UFI & AC power	4-117
1990-92 Tiller Electric 20-30 Hp (521cc) 2-Cyl w/UFI	4-118
1990-92 Remote Electric 20-30 Hp (521cc) 2-Cyl w/UFI	4-118
1993-01 Rope Start 18 Jet and 20-35 Hp (521cc) 2-Cyl w/CDI & AC	4-119
1993-01 Tiller Electric 18 Jet and 20-35 Hp (521cc) 2-Cyl w/CDI	4-119
1993-01 Remote Electric 18 Jet and 20-35 Hp (521cc) 2-Cyl	4-120
1990-93 Rope Start 25D-55 Hp (737cc) 2-Cyl w/UFI & AC	4-121
1990-93 Tiller Electric 25D-55 Hp (737cc) 2-Cyl w/UFI	4-121
1990-93 Remote Electric 25D-55 Hp (737cc) 2-Cyl	4-122
1992-01 Rope Start 25D-55 Hp (737cc) 2-Cyl w/CDI & AC	4-123
1992-95 Remote Electric 25DE and 48E (737cc) 2-Cyl w/CDI & VRO, Manual Trim/Tilt	4-124
1992-95 Remote Electric 25DTL (737cc) 2-Cyl w/CDI, VRO & PTT	4-124
1996-98 Remote Electric 48 Hp (737cc) E Model and 55 Hp (737cc) Com 2-Cyl	4-125
1992-98 Tiller Electric 40-55 Hp (737cc) 2-Cyl	4-125
1992-95 Electric Start 40/50 Hp (737cc) TTL 2-Cyl w/CDI, VRO & PTT	4-126
1996-01 Electric Start 40 Hp (737cc) TTL 2-Cyl w/PTT	4-127
1992-01 Remote Electric 40-55 Hp (737cc) 2-Cyl	4-128
1996-01 Rope Start 25/35 Hp (500/565cc) 3-Cyl	4-130
1996-01 Tiller Electric 25/35 Hp (500/565cc) 3-Cyl	4-130
1996-01 Remote Electric 25/35 Hp (500/565cc) 3-Cyl	4-131
1999-01 Remote Electric 40/50 Hp (815cc) 3-Cyl/4-Stroke w/PTT	4-132
1990-01 Rope 65 Hp (913cc) Commercial 3-Cyl w/AC	4-132
1990-92 Electric 60-70 Hp (913cc) TTL 3-Cyl w/PTT	4-133
1993-98 Electric 50-60 Hp (913cc) TTL 3-Cyl/2-Stroke w/PTT	4-133
1990-92 Remote Electric 60-70 Hp (913cc) EL 3-Cyl w/pre-mix & manual trim/tilt	4-134
1993-98 Remote Electric 50-70 Hp (913cc) EL and 65 Hp (913cc) WMLE Com 3-Cyl/2-Stroke	4-135
1993-01 Remote Electric 65 Hp (913cc) WML, WMLW & WE Com 3-Cyl	4-136
1990-92 Remote Electric 60-70 Hp (913cc) TL & TX 3-Cyl w/PTT	4-137
1993-95 Remote Electric 50-70 Hp (913cc) D, DT, PL, TL, TX & TY 3-Cyl w/PTT	4-137
1996-01 Remote Electric 40-70 Hp (913cc) D, DT, PL, TL, TX & TY Model 3-Cyl w/PTT	4-138
1999-01 Remote Electric 70 Hp (1298cc) 4-Cyl w/Electric Trim/Tilt	4-139
1996-01 Remote Control/Keyswitch for MWS Wiring Harness	4-140
1996-01 MWS Instrument Wiring Harness for Remotes	4-140
1996-01 Remote Control/Keyswitch for MWS Wiring Harness	4-140
Conventional Trim/Tilt Systems	8-22
Fastrak Systems	8-22