

# CONTENTS

---

<b>1</b>	<b>GENERAL INFORMATION, SAFETY AND TOOLS</b>	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-13
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-17
		TOOLS	1-19
		FASTENERS, MEASUREMENT, AND CONVERSIONS SPECIFICATIONS	1-27 1-28
		<b>2</b>	<b>MAINTENANCE AND TUNE-UP</b>
LUBRICATION	2-6		
ENGINE MAINTENANCE	2-12		
BOAT MAINTENANCE	2-32		
TUNE-UP	2-36		
TIMING AND SYNCHRONIZATION	2-49		
VALVE CLEARANCE	2-94		
STORAGE	2-108		
CLEARING A SUBMERGED MOTOR	2-112		
SPECIFICATIONS	2-113		
<b>3</b>	<b>FUEL SYSTEM</b>	FUEL AND COMBUSTION BASICS	3-2
		FUEL TANK AND LINES	3-6
		CARBURETED FUEL SYSTEM	3-11
		CARBURETOR SERVICE	3-17
		ELECTRONIC FUEL INJECTION	3-50
		FUEL PUMP (LOW PRESSURE) SERVICE	3-97
		SPECIFICATIONS	3-105
<b>4</b>	<b>IGNITION AND ELECTRICAL</b>	ELECTRICAL SYSTEMS	4-2
		IGNITION SYSTEMS	4-8
		CHARGING SYSTEM	4-35
		CRANKING SYSTEM	4-39
		ELECTRICAL SWITCH/SOLENOID SERVICE	4-51
		SPECIFICATIONS	4-54
		WIRING DIAGRAMS	4-62
		<b>5</b>	<b>LUBRICATION AND COOLING</b>
COOLING SYSTEM	5-10		
SPECIFICATIONS	5-31		

# CONTENTS

POWERHEAD MECHANICAL 6-2  
POWERHEAD REFINISHING 6-121  
POWERHEAD BREAK-IN 6-136  
SPECIFICATIONS 6-137

## POWERHEAD

# 6

LOWER UNIT 7-2  
GEARCASE SERVICE - YAMAHA 7-5  
GEARCASE SERVICE - MERCURY/MARINER 7-59  
JET DRIVE 7-87

## LOWER UNIT

# 7

YAMAHA HYDRO TILT LOCK SYSTEM 8-2  
YAMAHA TRIM & TILT SYSTEMS 8-2  
YAMAHA SINGLE TILT RAM POWER TRIM/TILT SYSTEMS 8-3  
YAMAHA LARGE MOTOR POWER TRIM/TILT SYSTEM 8-15  
MERCURY/MARINER TRIM & TILT SYSTEMS 8-28  
MERCURY/MARINER GAS ASSIST TILT SYSTEM 8-31  
MERCURY/MARINER SINGLE RAM INTEGRAL POWER TILT/TRIM 8-35

## TRIM AND TILT

# 8

YAMAHA REMOTE CONTROLS 9-2  
MERCURY/MARINER REMOTE CONTROLS 9-12  
TILLER HANDLE 9-16  
WIRING DIAGRAMS - YAMAHA 9-20  
WIRING DIAGRAMS - MERCURY/MARINER 9-21

## REMOTE CONTROL

# 9

HAND REWIND STARTER 10-2

## HAND REWIND STARTER

# 10

MASTER INDEX 10-19

## MASTER INDEX

ANODES (ZINCS) .....	2-29	CHECKING THE BATTERY .....	2-45
INSPECTION .....	2-29	CHECKING THE INTERNAL WIRING HARNESS .....	2-46
SERVICING .....	2-30	CHECKING THE STARTER .....	2-46
<b>BOAT MAINTENANCE</b> .....	<b>2-32</b>	<b>ELECTRICAL SWITCH/SOLENOID SERVICE</b> .....	<b>4-51</b>
BATTERIES .....	2-32	KILL SWITCH .....	4-51
FIBERGLASS HULL .....	2-35	MERCURY MAIN KEYSWITCH .....	4-51
INTERIOR .....	2-35	NEUTRAL SAFETY SWITCH .....	4-52
<b>CLEARING A SUBMERGED MOTOR</b> .....	<b>2-112</b>	START BUTTON .....	4-52
BATTERY .....	4-37	YAMAHA MAIN KEYSWITCH .....	4-51
CABLES .....	4-39	WARNING BUZZER/HORN .....	4-53
CHARGERS .....	4-39	<b>ELECTRONIC FUEL INJECTION</b> .....	<b>3-50</b>
CONSTRUCTION .....	4-38	COMPONENT LOCATIONS .....	3-86
MARINE BATTERIES .....	4-37	CONTROLLED COMBUSTION SYSTEM .....	3-52
LOCATION .....	4-38	CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL .....	3-80
PRECAUTIONS .....	4-38	ELECTRIC LOW-PRESSURE FUEL PUMP (V6 ONLY) .....	3-68
RATINGS .....	4-38	ENGINE CONTROL MODULE (ECM/CDI) .....	3-77
<b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)</b> ..	<b>1-10</b>	FUEL DISTRIBUTION MANIFOLD (MERCURY/MARINER) .....	3-76
ANCHORS .....	1-10	FUEL FLOW SCHEMATICS .....	3-95
BAILING DEVICES .....	1-10	FUEL INJECTION BASICS .....	3-50
COMPASS .....	1-11	FUEL INJECTORS .....	3-72
FIRST AID KIT .....	1-10	FUEL PRESSURE REGULATOR .....	3-76
OAR/PADDLE (SECOND MEANS OF PROPULSION) .....	1-10	IDLE SPEED/AIR CONTROL (ISC/IAC) VALVE .....	3-84
TOOLS AND SPARE PARTS .....	1-12	MERCURY/MARINER EFI .....	3-51
VHF-FM RADIO .....	1-10	MERCURY/MARINER TROUBLESHOOTING CHARTS .....	3-55
<b>BOATING SAFETY</b> .....	<b>1-4</b>	NEUTRAL OR SHIFT POSITION SWITCHES .....	3-84
COURTESY MARINE EXAMINATIONS .....	1-10	PRESSURE SENSORS (IAP/MAP) .....	3-83
REGULATIONS FOR YOUR BOAT .....	1-4	SELF DIAGNOSTIC SYSTEM .....	3-53
REQUIRED SAFETY EQUIPMENT .....	1-6	SENSOR AND CIRCUIT RESISTANCE/OUTPUT TESTS .....	3-57
<b>CARBURETED FUEL SYSTEM</b> .....	<b>3-11</b>	TEMPERATURE SENSORS .....	3-80
DESCRIPTION AND OPERATION .....	3-11	THROTTLE BODY AND INTAKE ASSEMBLY .....	3-61
TROUBLESHOOTING .....	3-14	THROTTLE POSITION SENSOR (TPS) .....	3-78
<b>CARBURETOR SERVICE</b> .....	<b>3-17</b>	TROUBLESHOOTING .....	3-52
CARBURETOR IDENTIFICATION .....	3-17	VAPOR SEPARATOR TANK (VST) AND HIGH-PRESSURE	
2.5 HP YAMAHA .....	3-17	FUEL PUMP .....	3-69
4 HP YAMAHA .....	3-18	YAMAHA EFI .....	3-50
4/5/6 HP MERCURY/MARINER .....	3-21	<b>ELECTRONIC IGNITION SYSTEMS</b> .....	2-45
6/8 HP YAMAHA .....	3-23	ENGINE COVERS .....	2-12
8/9.9 HP (232cc) .....	3-24	ENGINE IDENTIFICATION .....	2-2
9.9/15 HP (323cc) .....	3-28	ENGINE IDS .....	2-2
25 HP MODELS .....	3-30	ENGINE MODEL & SERIAL NUMBERS .....	2-3
30/40 HP MODELS .....	3-33	<b>ENGINE MAINTENANCE</b> .....	<b>2-12</b>
40/45/50 HP (935cc) .....	3-35	ANODES (ZINCS) .....	2-29
40/50/60 HP (996cc) .....	3-35	COOLING SYSTEM .....	2-13
75/80/90/100 HP .....	3-44	ENGINE COVERS .....	2-12
CDI/TCI UNIT AND IGNITION COILS .....	4-28	ENGINE OIL AND FILTER (4-STROKE) .....	2-15
REMOVAL & INSTALLATION .....	4-28	FUEL FILTER .....	2-19
<b>CHARGING SYSTEM</b> .....	<b>4-35</b>	JET DRIVE IMPELLER .....	2-28
BATTERY .....	4-37	PROPELLER .....	2-21
CHARGING CIRCUIT .....	4-35	TIMING BELT .....	2-31
CHARGING SYSTEMS .....	4-35	ENGINE OIL AND FILTER .....	2-15
CLEARING A SUBMERGED MOTOR .....	2-112	CHECKING OIL LEVEL .....	2-15
COMPRESSION TESTING .....	2-37	OIL CHANGE & FILTER SERVICE .....	2-16
COMPRESSION CHECK .....	2-37	OIL RECOMMENDATIONS .....	2-15
LOW COMPRESSION .....	2-38	EXHAUST COVER .....	6-123
CONNECTING RODS .....	6-125	<b>FASTENERS, MEASUREMENTS AND CONVERSIONS</b> .....	<b>1-27</b>
<b>COOLING SYSTEM</b> .....	<b>5-10</b>	BOLTS, NUTS AND OTHER THREADED RETAINERS .....	1-27
DESCRIPTION AND OPERATION .....	5-11	TORQUE .....	1-27
FLUSHING JET DRIVES .....	2-15	STANDARD AND METRIC MEASUREMENTS .....	1-27
FLUSHING THE COOLING SYSTEM .....	2-13	FLYWHEEL AND STATOR .....	4-21
THERMOSTAT .....	5-27	CLEANING & INSPECTION .....	4-27
THERMO-SWITCH .....	5-28	REMOVAL & INSTALLATION .....	4-21
TROUBLESHOOTING .....	5-12	FUEL .....	3-2
WATER PUMP .....	5-14	ALCOHOL-BLENDED FUELS .....	3-3
<b>CRANKING SYSTEM</b> .....	<b>4-39</b>	CHECKING FOR STALE/CONTAMINATED FUEL .....	3-3
STARTING CIRCUITS .....	4-39	HIGH ALTITUDE OPERATION .....	3-3
STARTER MOTOR .....	4-43	OCTANE RATING .....	3-2
STARTER MOTOR CIRCUIT .....	4-40	THE BOTTOM LINE WITH FUELS .....	3-3
STARTER MOTOR RELAY/SOLENOID .....	4-42	VAPOR PRESSURE .....	3-3
CRANKSHAFT .....	6-123	<b>FUEL AND COMBUSTION BASICS</b> .....	<b>3-2</b>
CRANKSHAFT POSITION SENSOR (CPS) .....	4-32	COMBUSTION .....	3-5
DESCRIPTION & OPERATION .....	4-32	FUEL .....	3-2
GAP ADJUSTMENT & SERVICE .....	4-32	FUEL SYSTEM PRESSURIZATION .....	3-4
CYLINDER BLOCK .....	6-128	FUEL SYSTEM SERVICE CAUTIONS .....	3-2
CYLINDER HEAD .....	6-132	FUEL FILTER .....	2-19
ELECTRICAL SYSTEM CHECKS .....	2-45	FUEL INJECTORS .....	3-72

# 10-20 MASTER INDEX

REMOVAL & INSTALLATION .....	3-73	FLYWHEEL AND STATOR	
TESTING .....	3-73	(STATOR/CHARGE/LIGHTING/PULSER COILS) .....	4-21
FUEL LINES AND FITTINGS .....	3-8	THERMO-SENSOR & THERMO-SWITCH .....	4-32
<b>FUEL PUMP (LOW-PRESSURE) SERVICE .....</b>	<b>3-97</b>	TROUBLESHOOTING .....	4-12
FUEL PUMPS .....	3-97	YAMAHA MICROCOMPUTER IGNITION SYSTEMS (YMIS) .....	4-31
PLUNGER ACTUATED FUEL PUMPS .....	3-100	<b>JET DRIVE .....</b>	<b>7-87</b>
FUEL PRESSURE REGULATOR .....	3-76	BEARING .....	2-10
REMOVAL & INSTALLATION .....	3-77	ADJUSTMENTS .....	7-96
TESTING .....	3-76	ASSEMBLY .....	7-87
FUEL SYSTEM CHECKS .....	2-46	IMPELLER .....	2-28
FUEL SYSTEM PRESSURIZATION .....	3-4	JET DRIVE ADJUSTMENTS .....	7-96
PRESSURIZING (CHECKING FOR LEAKS) .....	3-5	JET DRIVE ASSEMBLY .....	7-87
RELIEVING PRESSURE (EFI) .....	3-4	ASSEMBLY .....	7-93
<b>FUEL TANK AND LINES .....</b>	<b>3-6</b>	CLEANING & INSPECTING .....	7-90
FUEL LINES AND FITTINGS .....	3-8	DESCRIPTION & OPERATION .....	7-87
FUEL TANK .....	3-6	MODEL IDENTIFICATION .....	7-88
<b>GAS ASSIST TILT SYSTEM - MERCURY/MARINER .....</b>	<b>8-31</b>	REMOVAL & DISASSEMBLY .....	7-88
DESCRIPTION & OPERATION .....	8-31	TRIM ADJUSTMENT .....	7-100
GAS ASSIST DAMPER .....	8-31	JET DRIVE BEARING .....	2-10
GEARCASE (LOWER UNIT) OIL .....	2-9	DAILY BEARING LUBRICATION .....	2-11
CHECKING OIL LEVEL .....	2-9	GREASE REPLACEMENT .....	2-11
DRAINING AND FILLING .....	2-10	RECOMMENDED LUBRICANT .....	2-10
OIL RECOMMENDATIONS .....	2-9	JET DRIVE IMPELLER .....	2-28
<b>GEARCASE SERVICE - MERCURY/MARINER .....</b>	<b>7-59</b>	<b>LOWER UNIT .....</b>	<b>7-2</b>
REPAIR AND OVERHAUL TIPS .....	7-59	EXHAUST GASES .....	7-4
4/5/6 HP (1-CYL) .....	7-60	GENERAL INFORMATION .....	7-2
8-15 HP (2-CYL) .....	7-64	SHIFTING PRINCIPLES .....	7-2
25 HP (BIGFOOT) .....	7-70	TROUBLESHOOTING .....	7-4
30/40 HP (NON-BIGFOOT) .....	7-70	LUBRICANTS .....	2-6
40/45/50 HP (NON-BIGFOOT, 935cc) .....	7-70	<b>LUBRICATION .....</b>	<b>2-6</b>
30-115 HP (BIGFOOT) .....	7-74	GEARCASE (LOWER UNIT) OIL .....	2-9
40/50/60 HP (996cc) .....	7-74	JET DRIVE BEARING .....	2-10
75-115 HP (NON-BIGFOOT) .....	7-74	LUBRICANTS .....	2-6
V6 MODELS .....	7-87	LUBRICATING THE MOTOR .....	2-7
<b>GEARCASE SERVICE - YAMAHA .....</b>	<b>7-5</b>	LUBRICATION INSIDE THE BOAT .....	2-8
REPAIR AND OVERHAUL TIPS .....	7-5	POWER TRIM/TILT RESERVOIR .....	2-11
2.5 AND 4 HP (1-CYL) .....	7-5	<b>LUBRICATION SYSTEM .....</b>	<b>5-2</b>
6-40 HP (2- AND 3-CYL) .....	7-13	DESCRIPTION AND OPERATION .....	5-2
40-225 HP (4- AND 6-CYL) .....	7-35	OIL PRESSURE .....	5-2
<b>GENERAL INFORMATION .....</b>	<b>2-2</b>	OIL PRESSURE SWITCH/SENSOR .....	5-3
BEFORE/AFTER EACH USE .....	2-4	OIL PUMP .....	5-5
ENGINE IDENTIFICATION .....	2-2	NEUTRAL OR SHIFT POSITION SWITCHES .....	3-84
MAINTENANCE COVERAGE IN THIS MANUAL .....	2-2	OIL PRESSURE SWITCH/SENSOR .....	5-3
MAINTENANCE EQUALS SAFETY .....	2-2	DESCRIPTION & OPERATION .....	5-3
OUTBOARDS ON SAIL BOATS .....	2-2	REMOVAL & INSTALLATION .....	5-4
<b>HAND REWIND STARTERS .....</b>	<b>10-2</b>	TESTING .....	5-3
2.5 HP AND 4 HP YAMAHA .....	10-2	OIL PUMP .....	5-5
4/5/6 HP MERCURY/MARINER .....	10-3	REMOVAL, OVERHAUL & INSTALLATION .....	5-5
6/8 HP YAMAHA .....	10-4	PISTONS .....	6-126
8/9.9 HP (232cc) .....	10-6	POWER TRIM/TILT RESERVOIR .....	2-11
9.9/15 HP (323cc) .....	10-11	CHECKING FLUID LEVEL .....	2-11
25 HP YAMAHA .....	10-13	RECOMMENDED LUBRICANT .....	2-11
25-40 HP MERCURY/MARINER .....	10-13	<b>POWER TRIM/TILT SYSTEM - YAMAHA (LARGE MOTOR) .....</b>	<b>8-15</b>
30/40J/40 HP YAMAHA .....	10-16	DESCRIPTION & OPERATION .....	8-15
<b>HOW TO USE THIS MANUAL .....</b>	<b>1-2</b>	MAINTENANCE .....	8-16
AVOIDING THE MOST COMMON MISTAKES .....	1-4	POWER TRIM/TILT SWITCH .....	8-20
AVOIDING TROUBLE .....	1-2	PTT ASSEMBLY (DUAL TRIM RAM) .....	8-22
CAN YOU DO IT? .....	1-2	TRIM SENSOR .....	8-21
DIRECTIONS AND LOCATIONS .....	1-3	TRIM/TILT MOTOR .....	8-21
MAINTENANCE OR REPAIR? .....	1-2	TRIM/TILT RELAY .....	8-19
PROFESSIONAL HELP .....	1-3	TROUBLESHOOTING .....	8-17
PURCHASING PARTS .....	1-3	<b>POWERHEAD BREAK-IN .....</b>	<b>6-136</b>
WHERE TO BEGIN .....	1-2	BREAK-IN PROCEDURES .....	6-136
WHY COMBINE YAMAHA AND MERCURY/MARINER? .....	1-2	<b>POWERHEAD MECHANICAL .....</b>	<b>6-2</b>
<b>HYDRO TILT LOCK SYSTEM - YAMAHA .....</b>	<b>8-2</b>	GENERAL INFORMATION .....	6-2
DESCRIPTION & OPERATION .....	8-2	2.5 HP AND 4 HP YAMAHA .....	6-4
SERVICING .....	8-3	4/5/6 HP MERCURY/MARINER .....	6-12
IDLE SPEED ADJUSTMENT .....	2-48	6/8 HP YAMAHA AND ALL 8/9.9 HP (232cc) .....	6-18
IDLE SPEED/AIR CONTROL (ISC/IAC) VALVE .....	3-84	9.9/15 HP (323cc) .....	6-36
REMOVAL & INSTALLATION .....	3-84	25 HP .....	6-45
<b>IGNITION SYSTEMS .....</b>	<b>4-8</b>	30/40 HP 3-CYLINDER .....	6-56
CDI/TCI/DIGITAL INDUCTIVE IGNITION SYSTEMS .....	4-8	FOUR-CYLINDER 40/45/50 HP (935cc) AND 30/40/60 HP (966cc) .....	6-66
CDI/TCI UNIT AND IGNITION COILS .....	4-28	75/80/90/100 HP AND 115 HP POWERHEADS .....	6-81
CRANKSHAFT POSITION SENSOR (CPS) .....	4-32	150 HP YAMAHA .....	6-97
		200/225 HP V6 .....	6-107

<b>POWERHEAD REFINISHING</b> .....	<b>6-121</b>	IGNITION SYSTEM - V-ENGINES .....	4-56
CONNECTING RODS .....	6-125	LUBRICATION .....	2-117
CRANKSHAFT .....	6-123	MAINTENANCE .....	2-116
CYLINDER BLOCK .....	6-128	POWERHEAD .....	6-137
CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN) .....	6-132	TUNE-UP .....	2-119
EXHAUST COVER .....	6-123	VALVE CLEARANCE - YAMAHA .....	2-121
GENERAL INFORMATION .....	6-121	VALVE CLEARANCE - MERCURY/MARINER .....	2-121
PISTONS .....	6-126	STARTER MOTOR .....	4-43
PRESSURE SENSORS (IAP/MAP) .....	3-83	DESCRIPTION .....	4-43
REMOVAL & INSTALLATION .....	3-84	EXPLODED VIEWS .....	4-45
TESTING .....	3-83	OVERHAUL .....	4-49
PROPELLER .....	2-21	REMOVAL & INSTALLATION .....	4-43
GENERAL INFORMATION .....	2-22	STARTER RELAY/SOLENOID .....	4-42
INSPECTION .....	2-24	DESCRIPTION & OPERATION .....	4-42
REMOVAL & INSTALLATION .....	2-25	REMOVAL & INSTALLATION .....	4-43
RE-COMMISSIONING .....	2-111	TESTING .....	4-42
REMOVAL FROM STORAGE .....	2-111	<b>STORAGE</b> .....	<b>2-108</b>
<b>REMOTE CONTROLS</b> .....	<b>9-2</b>	WINTERIZATION .....	2-108
MERCURY/MARINER .....	9-12	RE-COMMISSIONING .....	2-111
YAMAHA .....	9-2	TCI UNIT AIR GAP .....	2-44
<b>REMOTE CONTROLS - MERCURY/MARINER</b> .....	<b>9-12</b>	TEMPERATURE SENSORS .....	3-80
ASSEMBLY .....	9-15	REMOVAL & INSTALLATION .....	3-83
CLEANING & INSPECTING .....	9-15	TESTING .....	3-81
DESCRIPTION & OPERATION .....	9-12	THERMOSTAT .....	5-27
DISASSEMBLY .....	9-14	REMOVAL & INSTALLATION .....	5-27
REMOVAL & INSTALLATION .....	9-12	THERMO-SWITCH .....	5-28
TROUBLESHOOTING .....	9-12	CHECKING CONTINUITY .....	5-30
WIRING DIAGRAMS .....	9-21	DESCRIPTION & OPERATION .....	5-28
<b>REMOTE CONTROLS - YAMAHA</b> .....	<b>9-2</b>	OPERATIONAL CHECK .....	5-30
CHOKE SWITCH .....	9-2	THERMO-SENSOR & THERMO-SWITCH .....	4-32
CONTROL BOX ASSEMBLY .....	9-4	CHECKING RESISTANCE .....	4-34
KILL SWITCH .....	9-3	DESCRIPTION & OPERATION .....	4-33
NEUTRAL SAFETY SWITCH .....	9-3	OPERATIONAL CHECK .....	4-33
REMOTE CONTROL BOX .....	9-2	THROTTLE BODY AND INTAKE ASSEMBLY .....	3-61
START BUTTON .....	9-3	REMOVAL & INSTALLATION .....	3-61
WARNING BUZZER/HORN .....	9-2	THROTTLE POSITION SENSOR (TPS) .....	3-78
WIRING DIAGRAMS .....	9-20	REMOVAL & INSTALLATION .....	3-80
<b>SAFETY IN SERVICE</b> .....	<b>1-13</b>	TESTING .....	3-78
DO'S .....	1-13	<b>TILLER HANDLE</b> .....	<b>9-16</b>
DON'TS .....	1-13	DESCRIPTION & OPERATION .....	9-16
SELF DIAGNOSTIC SYSTEM .....	3-53	REMOVAL & INSTALLATION .....	9-16
<b>SHOP EQUIPMENT</b> .....	<b>1-17</b>	TROUBLESHOOTING .....	9-16
CHEMICALS .....	1-17	<b>TIMING AND SYNCHRONIZATION</b> .....	<b>2-49</b>
SAFETY TOOLS .....	1-17	GENERAL INFORMATION .....	2-49
<b>SINGLE RAM INTEGRAL POWER TILT/TRIM - MERCURY/MARINER</b> .....	<b>8-35</b>	PREPPING THE MOTOR .....	2-50
DESCRIPTION & OPERATION .....	8-35	SYNCHRONIZATION .....	2-50
PTT ASSEMBLY .....	8-42	TIMING .....	2-49
TROUBLESHOOTING .....	8-35	2.5 HP YAMAHA .....	2-50
<b>SINGLE TILT RAM POWER TRIM/TILT SYSTEM - YAMAHA</b> .....	<b>8-3</b>	4 HP YAMAHA .....	2-51
DESCRIPTION & OPERATION .....	8-3	4/5/6 HP MERCURY/MARINER .....	2-52
MAINTENANCE .....	8-5	6/8 HP YAMAHA .....	2-54
PTT ASSEMBLY .....	8-9	8/9.9 HP (232cc) YAMAHA .....	2-55
TILT RELAY .....	8-6	8/9.9 HP (232cc) MERCURY/MARINER .....	2-59
TILT SWITCH .....	8-7	15 HP (323cc) YAMAHA .....	2-61
TRIM SENSOR .....	8-9	9.9/15 HP (323cc) MERCURY/MARINER .....	2-63
TROUBLESHOOTING .....	8-5	25 HP .....	2-64
SPARK PLUG WIRES .....	2-43	30/40 HP 3-CYL (CARB) .....	2-66
SPARK PLUGS .....	2-39	30/40 HP 3-CYL (EFI) .....	2-68
<b>SPECIFICATIONS</b> .....		40/50/60 HP 4-CYL (EFI) .....	2-68
BOLT TORQUE - METRIC .....	1-28	40/45/50 HP (935cc) .....	2-70
BOLT TORQUE - U.S. STANDARD .....	1-28	40/50/60 HP (996cc) - CARB .....	2-70
CONVERSION FACTORS .....	1-28	75/80/90/100 HP .....	2-78
CAPACITIES .....	2-118	115 HP MODELS .....	2-82
CARB - MERCURY/MARINER .....	3-106	150 HP YAMAHA .....	2-86
CARB - YAMAHA .....	3-105	200/225 HP MODELS .....	2-90
CHARGING SYSTEM - MERCURY/MARINER .....	4-61	TIMING BELT .....	2-31
CHARGING SYSTEM - YAMAHA .....	4-59	INSPECTION .....	2-31
COOLING SYSTEM .....	5-31	<b>TOOLS</b> .....	<b>1-19</b>
CONVERSION FACTORS .....	1-28	HAND TOOLS .....	1-19
GENERAL ENGINE .....	2-113	OTHER COMMON TOOLS .....	1-22
IGNITION SYSTEM - 1-CYL .....	4-55	SPECIAL TOOLS .....	1-23
IGNITION SYSTEM - MERCURY/MARINER INLINE .....	4-57	ELECTRONIC TOOLS .....	1-23
IGNITION SYSTEM - YAMAHA INLINE .....	4-54	MEASURING TOOLS .....	1-25
IGNITION CONTROL SYSTEM - YAMAHA INLINE .....	4-56	<b>TRIM/TILT SYSTEMS</b> .....	
		MERCURY/MARINER GAS ASSIST .....	8-31

# 10-22 MASTER INDEX

MERCURY/MARINER SINGLE RAM INTEGRAL POWER .....	8-35	6/8 HP YAMAHA .....	2-97
YAMAHA HYDRO TILT LOCK .....	8-2	8/9.9 HP (232cc) .....	2-97
YAMAHA LARGE MOTOR POWER .....	8-15	9.9/15 HP (323cc) .....	2-99
YAMAHA SINGLE TILT RAM POWER .....	8-3	25 HP .....	2-99
<b>TRIM &amp; TILT SYSTEMS - MERCURY/MARINER .....</b>	<b>8-28</b>	30/40 HP 3-CYLINDER .....	2-100
INTRODUCTION .....	8-28	40/45/50 HP (935cc) .....	2-101
MECHANICAL TILT .....	8-28	40/50/60 HP (996cc) .....	2-101
<b>TRIM &amp; TILT SYSTEMS - YAMAHA .....</b>	<b>8-2</b>	75/80/90/100 HP .....	2-103
INTRODUCTION .....	8-2	115 HP .....	2-103
<b>TROUBLESHOOTING .....</b>	<b>1-13</b>	150 HP YAMAHA .....	2-105
BASIC OPERATING PRINCIPLES .....	1-13	200/225 HP .....	2-106
CARBURETOR .....	3-14	WATER PUMP .....	5-14
COOLING SYSTEM .....	5-12	EXPLODED VIEWS .....	5-19
EFI .....	3-52	INSPECTION & OVERHAUL .....	5-17
ELECTRICAL .....	4-6	REMOVAL & INSTALLATION .....	5-15
IGNITION .....	4-12	WINTERIZATION .....	2-108
MERCURY/MARINER EFI .....	3-55	PREPPING FOR STORAGE .....	2-109
STARTER .....	4-40	<b>WIRING DIAGRAMS .....</b>	<b>4-62</b>
TILLER HANDLE .....	9-16	MERCURY/MARINER .....	
<b>TUNE-UP .....</b>	<b>2-36</b>	4/5/6 HP .....	4-63
COMPRESSION TESTING .....	2-37	8/9.9 HP (232cc) .....	4-65
ELECTRICAL SYSTEM CHECKS .....	2-45	9.9/15 HP (323cc) .....	4-72
ELECTRONIC IGNITION SYSTEMS .....	2-45	25 HP .....	4-78
FUEL SYSTEM CHECKS .....	2-46	30/40 HP .....	4-86
IDLE SPEED ADJUSTMENT (MINOR ADJUSTMENTS) .....	2-48	40/45/50 HP (935cc) .....	4-92
INTRODUCTION .....	2-36	40/50/60 HP (996cc) .....	4-97
SPARK PLUG WIRES .....	2-43	75/90 HP .....	4-102
SPARK PLUGS .....	2-39	2001 115 HP EFI .....	4-106
TCI UNIT AIR GAP .....	2-44	225 HP EFI .....	4-112
TUNE-UP SEQUENCE .....	2-36	YAMAHA .....	
TUNE-UP SEQUENCE .....	2-36	2.5 HP AND 4 HP .....	4-63
<b>UNDERSTANDING AND TROUBLESHOOTING .....</b>		6/8 HP .....	4-64
<b>ELECTRICAL SYSTEMS .....</b>	<b>4-2</b>	8/9.9 HP (232cc) .....	4-66
BASIC ELECTRICAL THEORY .....	4-2	9.9/15 HP (323cc) .....	4-76
ELECTRICAL COMPONENTS .....	4-2	25 HP .....	4-82
ELECTRICAL SYSTEM PRECAUTIONS .....	4-8	30/40J/40 HP .....	4-91
ELECTRICAL TESTING .....	4-6	45/50/50J HP (935cc) .....	4-93
TEST EQUIPMENT .....	4-4	60J/60 HP (996cc) .....	4-102
TROUBLESHOOTING .....	4-6	75/80/90J/90/100 HP .....	4-105
WIRE AND CONNECTOR REPAIR .....	4-7	115J/115 HP EFI .....	4-109
<b>VALVE CLEARANCE .....</b>	<b>2-94</b>	150 HP EFI .....	4-110
2.5 HP YAMAHA .....	2-95	200/225 HP EFI .....	4-111
4 HP YAMAHA .....	2-95	200/225 HP EFI .....	4-114
4/5/6 HP MERCURY/MARINER .....	2-96		