



POWER TRIM KIT (19217A3)

COMPONENTS CONTAINED IN KIT:

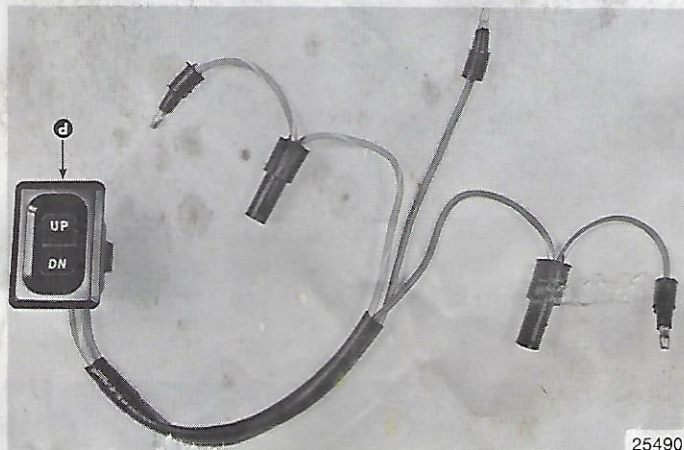

25490

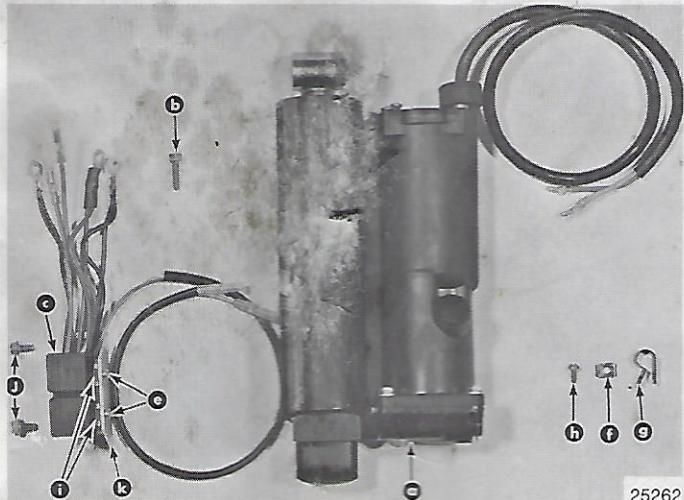

25262

REF.	DESCRIPTION	QTY.
a	Power Trim Assembly	1
b	Bolt (.250-20 x .88)	1
c	Relay Switch Assembly	1
d	Trim Switch Assembly	1
e	Screw	2
f	C-Washer	1
g	J-Clip	1
h	Screw (10-16 x .44)	1
i	'J'-Type Retainer	2
j	Bolt (.250-20 x .50)	2
k	Relay Support	1

⚠ CAUTION

Remove cowling and remove all spark plug leads from spark plugs to prevent accidental starting while servicing outboard.

Disconnect battery leads from battery terminals.


⚠ WARNING

Service or installation of the trim system may result in loss of pressure in the trim cylinders. If the outboard is not in the full down position, such loss of pressure will cause the engine to fall to the full down position with a potential for pinching, crushing or cutting personal injury. To avoid such injury:

Secure the outboard in the full tilt up position with a hoist firmly attached to the gear case to prevent abrupt return of the outboard to its full down position.

INSTALLATION:

1. Remove link arm between accumulator and manual release lever.

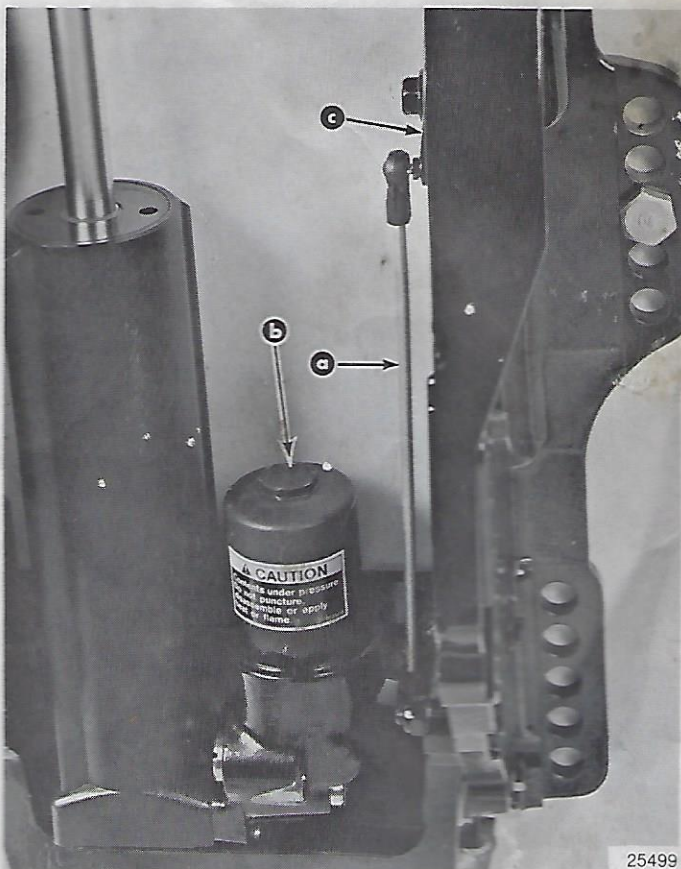

25499

- a - Link Arm
- b - Accumulator
- c - Manual Release Lever